


REGULAR ARM & TOP JAMB TEMPLATE INSTRUCTIONS 921BC Door Closers

- Installing a Top Jamb Arm**
- Select hand of door and the degree of door opening.
 - Separate template sections "A" and "B".
 - Fold template on the corresponding line for desired degree and hand.
 - Match this line with the hinge edge of door and attach template to door.
 - Be sure "Frame" line on template lines up with the top edge of the door.
 - Using a square, project "Closer Projection Line" on section "A" of template onto frame and use to align and attach section "B".
 - Be sure to align bottom edge of section "B" with edge of frame.
 - Mark, prep, and drill/tap 1/4"-20 holes for connecting rod shoe and closer body mounting screws.

- Installing a Regular Arm**
- Select hand of door and degree of door opening.
 - Fold template on the corresponding line for desired degree of door opening and hand.
 - Match this line with the hinge edge and door and attach template to door.
 - Be sure frame line on template lines up with the bottom edge of frame face.
 - Mark, prep, and drill/tap 1/4"-20 holes for closer body and jamb shoe mounting screws.

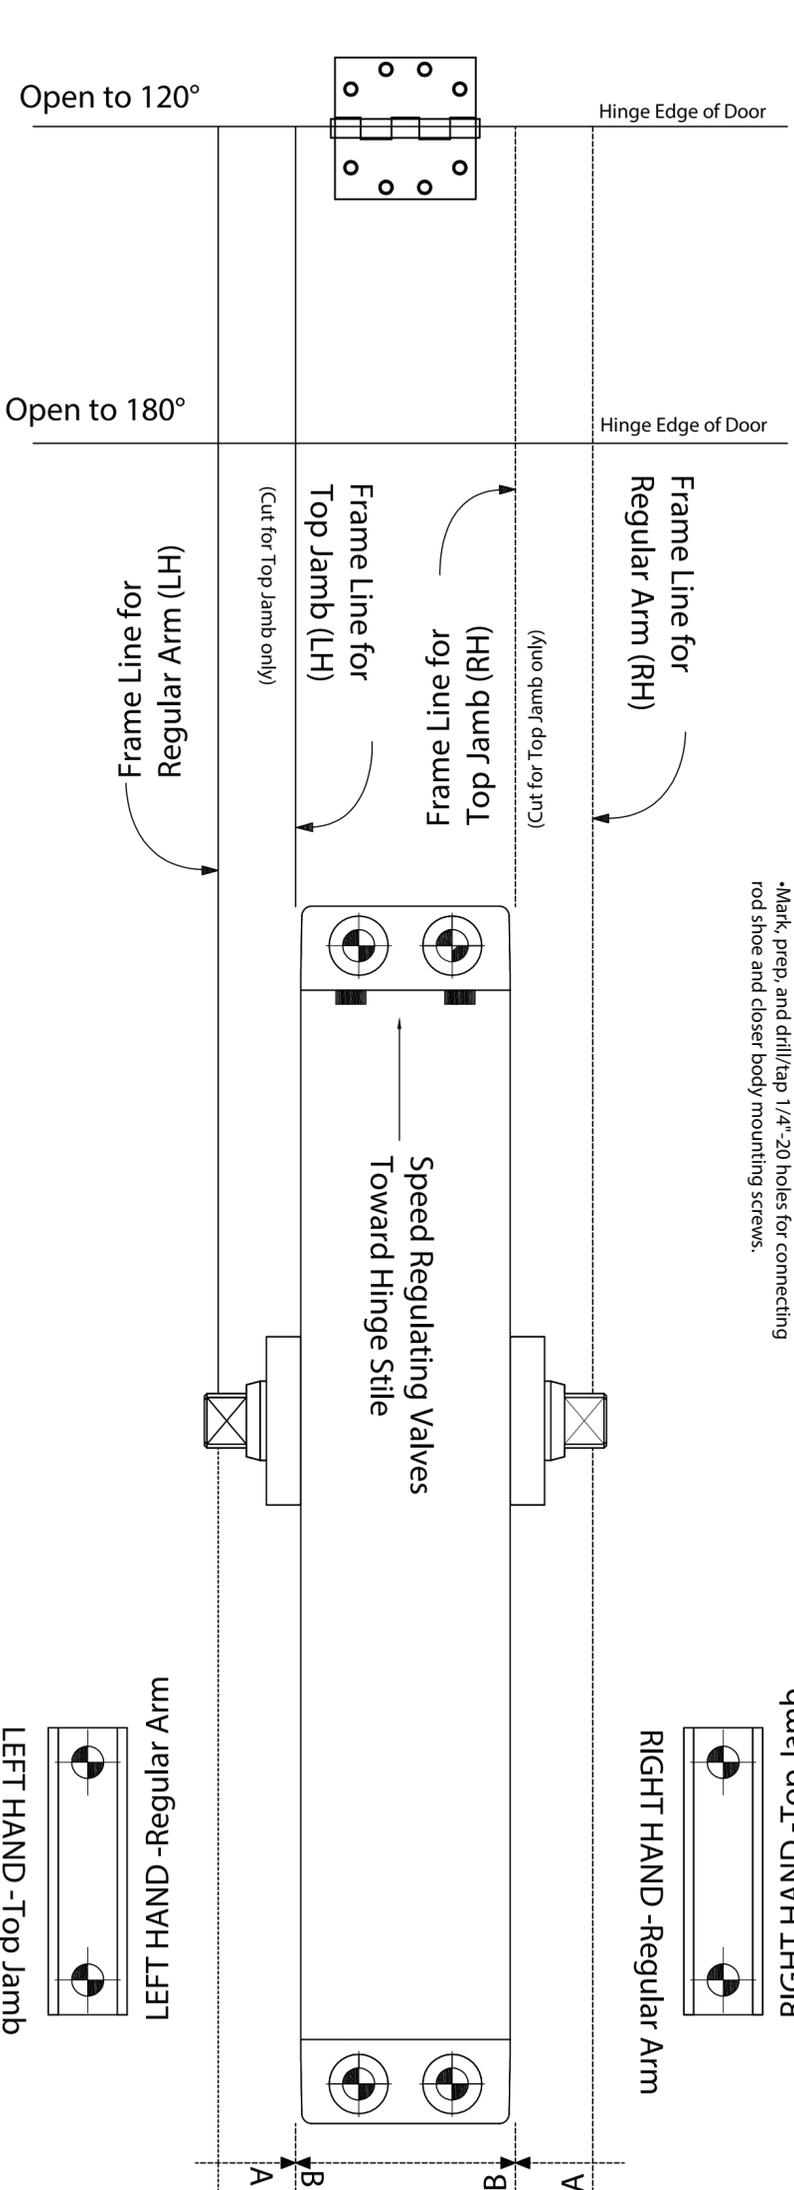

⊕ Pre-Drill 1/8" Holes

PARALLEL ARM TEMPLATE INSTRUCTIONS 921BC Door Closers

